



mim IMPACT TECHNOLOGY **CLIP**


Old Table kit update

UPDATING INSTRUCTIONS — Art. Nr. 00320 (Former construction)




mimSAFE

STEP
1

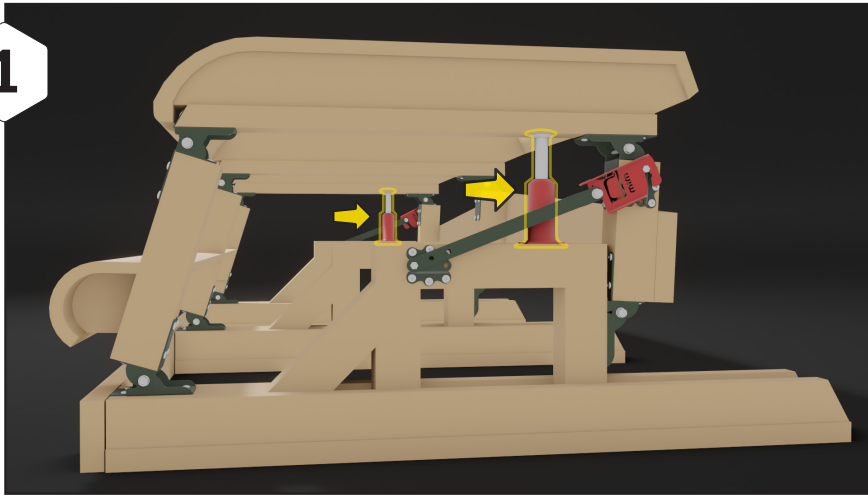


Secure the top part of the fence using car jacks or similar.

STEP
2

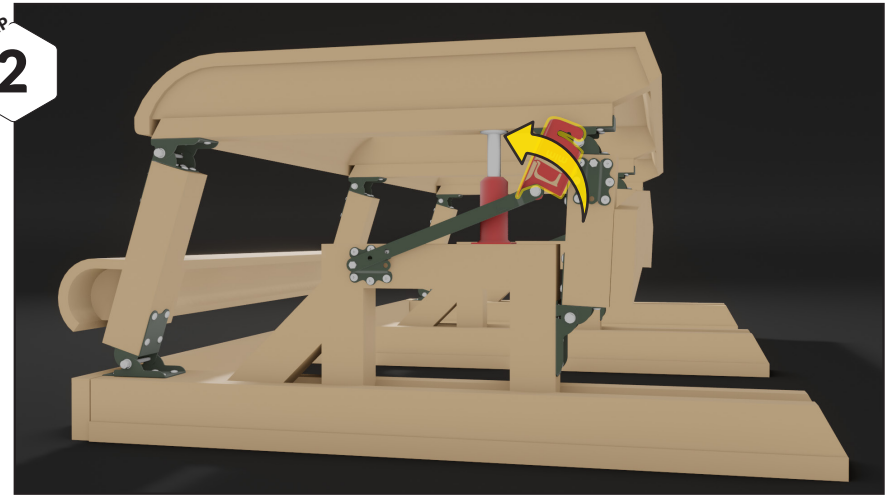


Remove the red clips on both sides.

STEP
3

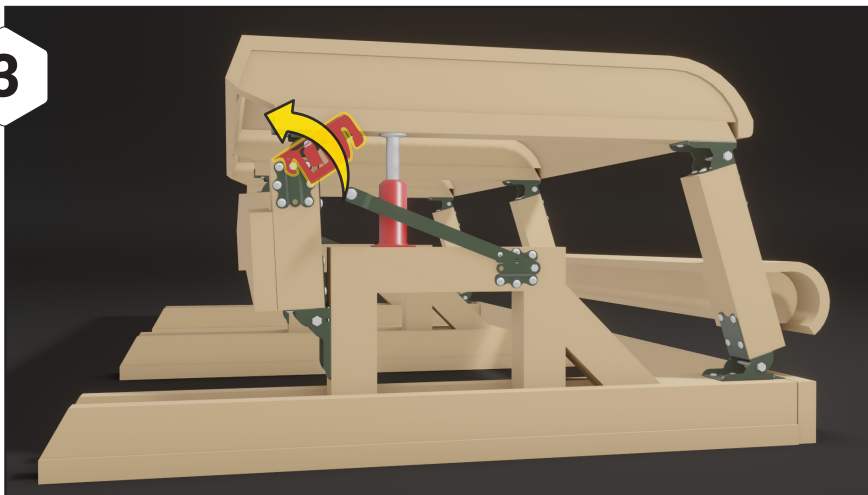


Remove the red clips on both sides.


STEP
4

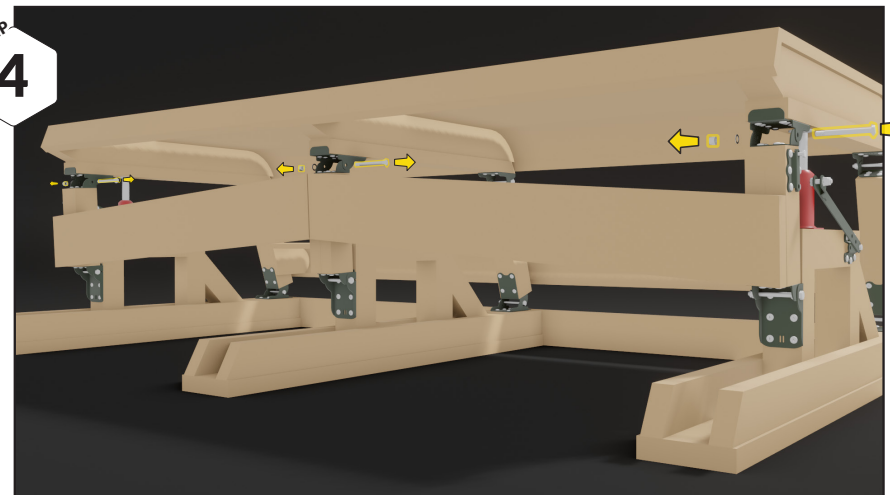


Unscrew the bolts of the top hinges.

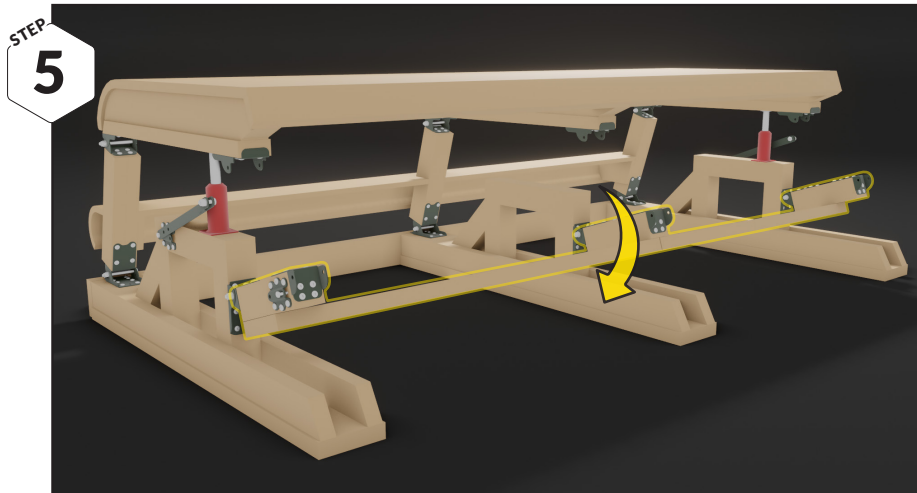


Fold down the rear part of the fence.

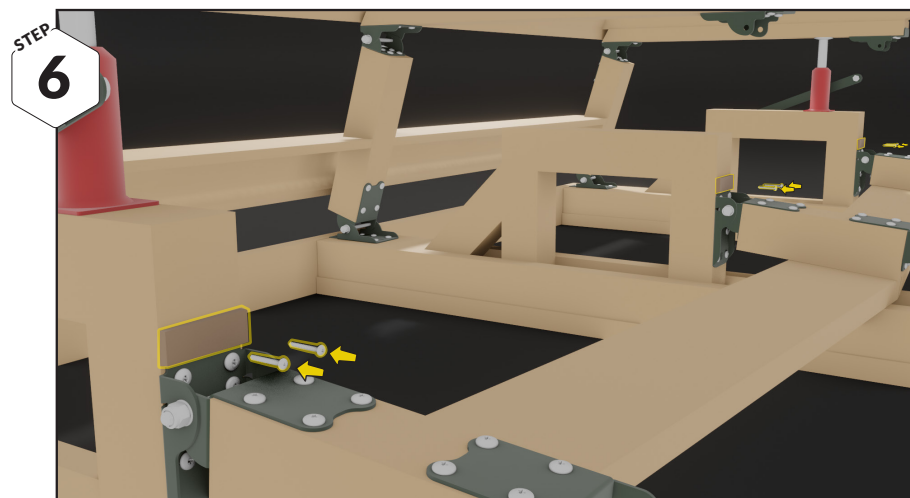


Screw a 15mm thick hardwood board on each pillar.

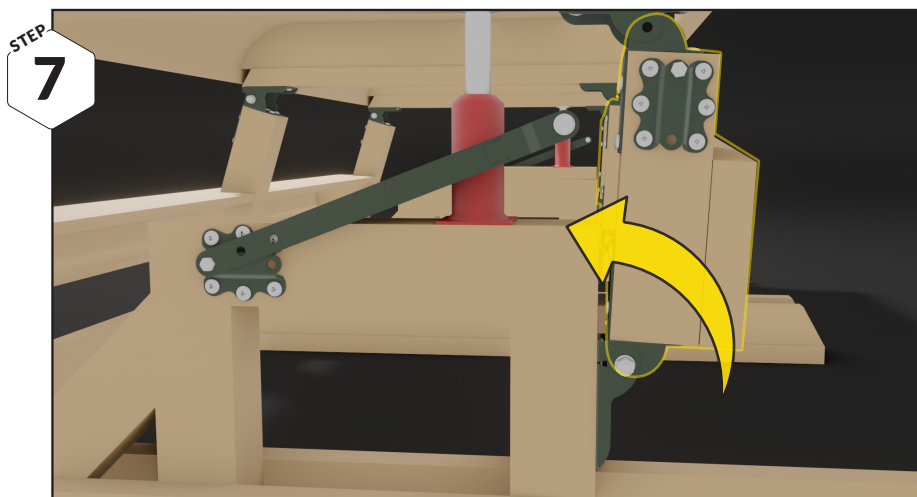


Fold up the rear part of the fence.

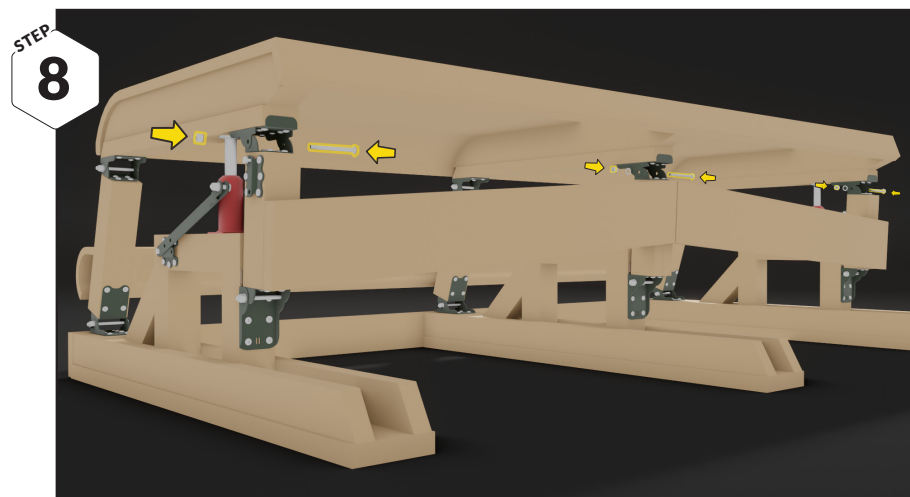


Screw the bolts of the top hinges.

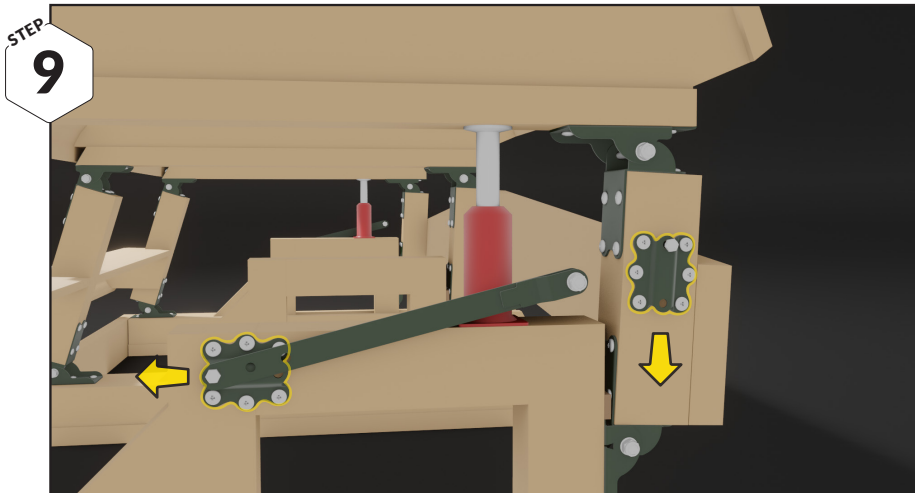


Place the clip holders in their new position according to the yellow clip positioning. (see assembly instructions for Table kit 80320)

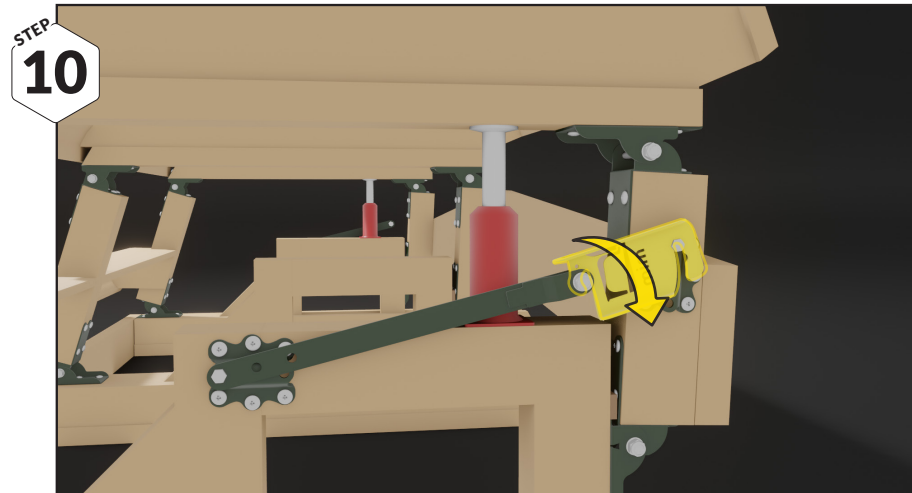

Secure the table with the new yellow clips on both sides.

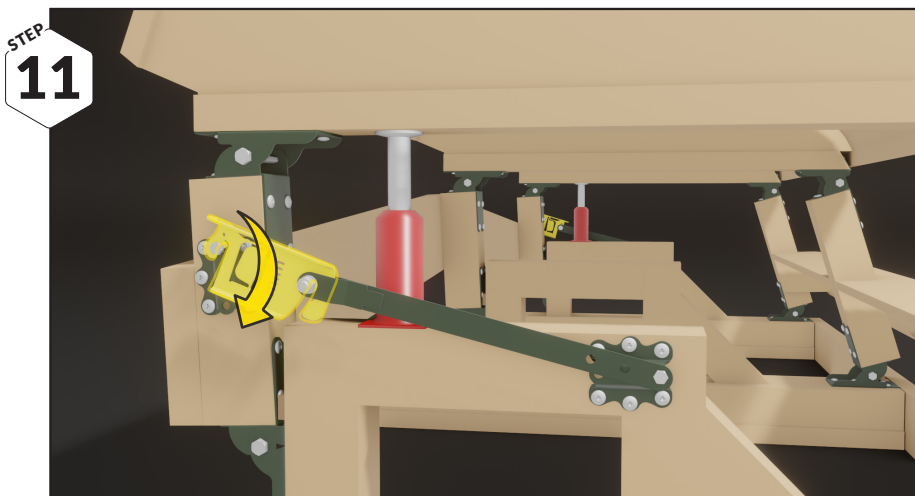

Secure the table with the new yellow clips on both sides.

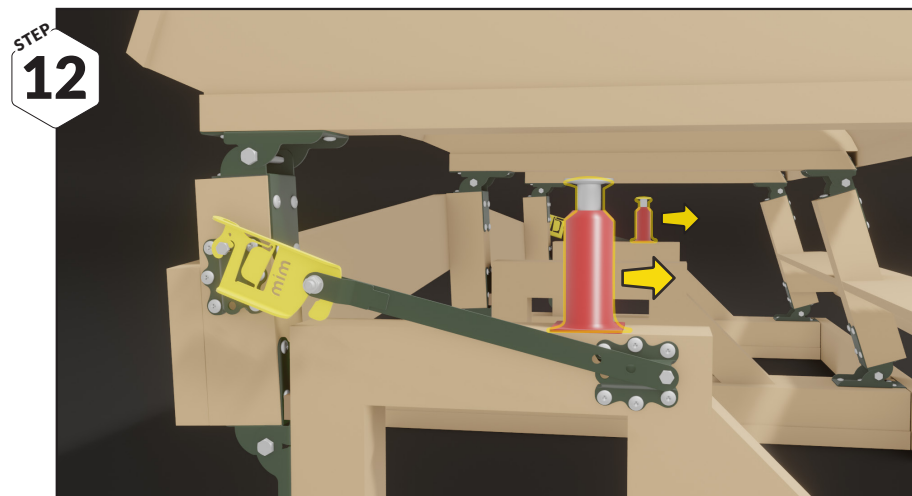

Remove the supporting car jacks.



Watch the animated assembly instructions at
<http://mimclip.mimsafe.com>